




HOOVER

REFRIGERATOR
USER'S OPERATION MANUAL

HVDN 8182DSH

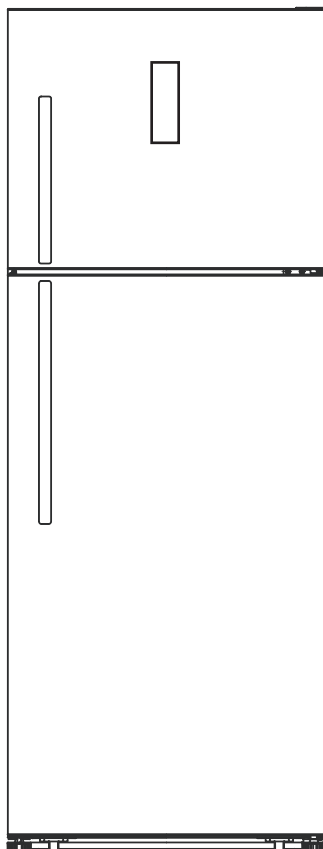

Contents

SAFETY INFORMATION	4
SCRAPPING OLD APPLIANCES	7
Energy Saving	7
Installing your new appliance	8
Description of the appliance	10
Display controls	11
Using your appliance	12
Helpful hints and tips	14
Cleaning and care	15
Troubleshooting	16
Disposal of the appliance	17

Thank you for purchasing this product.

Before using your refrigerator, please carefully read this instruction manual in order to maximize its performance. Store all documentation for subsequent use or for other owners. This product is intended solely for household use or similar applications such as:

- the kitchen area for personnel in shops, offices and other working environments
- on farms, by clientele of hotels, motels and other environments of a residential type
- at bed and breakfasts (B & B)
- for catering services and similar applications not for retail sale.

This appliance must be used only for purposes of storage of food, any other use is considered dangerous and the manufacturer will not be responsible for any omissions. Also, it is recommended that you take note of the warranty conditions.

SAFETY INFORMATION

The refrigerator contains a refrigerant gas (R600a: isobutane) and insulating gas (cyclopentane), with high compatibility with the environment, that are, however, inflammable.

We recommend that you follow the following regulations so as to avoid situations dangerous to you:

Before performing any operation, unplug the power cord from the power socket.

- The refrigeration system positioned behind and inside the Wine Coolers contains refrigerant. Therefore, avoid damaging the tubes.**
- If in the refrigeration system a leak is noted, do not touch the wall outlet and do not use open flames. Open the window and let air into the room. Then call a service centre to ask for repair.**
- Do not scrape with a knife or sharp object to remove frost or ice that occurs. With these, the refrigerant circuit can be damaged, the spill from which can cause a fire or damage your eyes.**
- Do not install the appliance in humid, oily or dusty places, nor expose it to direct sunlight and to water.**

- **Do not install the appliance near heaters or inflammable materials.**
- **Do not use extension cords or adapters.**
- **Do not excessively pull or fold the power cord or touch the plug with wet hands.**
- **Do not damage the plug and/or the power cord; this could cause electrical shocks or fires.**
- **It is recommended to keep the plug clean, any excessive dust residues on the plug can be the cause fire.**
- **Do not use mechanical devices or other equipment to hasten the defrosting process.**
- **Absolutely avoid the use of open flame or electrical equipment, such as heaters, steam cleaners, candles, oil lamps and the like in order to speed up the defrosting phase.**
- **Do not use or store inflammable sprays, such as spray paint, near the Wine Coolers. It could cause an explosion or fire.**
- **Do not use electrical appliances inside the food storage compartments, unless they are of the type recommended by the manufacturer.**
- **Do not place or store inflammable and highly volatile materials such as ether, petrol, LPG, propane gas, aerosol spray cans, adhesives, pure alcohol, etc. These materials may cause an explosion.**
- **Do not store medicine or research materials in the Wine Coolers. When the material that requires a strict control of storage temperatures is to be**

stored, it is possible that it will deteriorate or an uncontrolled reaction may occur that can cause risks.

- Maintain the ventilation openings in the appliance enclosure or in the built-in structure, free of obstruction.**
- Do not place objects and/or containers filled with water on the top of the appliance.**
- Do not perform repairs on this Wine Coolers. All interventions must be performed solely by qualified personnel.**
- This appliance can be used by children aged from 8 years and above and by persons with reduced physical, sensory or mental capabilities or with a lack of experience and knowledge; provided that they have been given adequate supervision or instruction concerning how to use the appliance in a safe way and understand the hazards involved.**
- Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision**

SCRAPPING OLD APPLIANCES



This appliance is marked according to the European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE).

WEEE contains both polluting substances (which can cause negative consequences for the environment) and basic components (which can be re-used). It is important to have WEEE subjected to specific treatments, in order to remove and dispose properly all pollutants, and recover and recycle all materials.

Individuals can play an important role in ensuring that WEEE does not become an environmental issue; it is essential to follow some basic rules:

- WEEE should not be treated as household waste;
- WEEE should be handed over to the relevant collection points managed by the municipality or by registered companies. In many countries, for large WEEE, home collection could be present.

In many countries, when you buy a new appliance, the old one may be returned to the retailer who has to collect it free of charge on a one-to-one basis, as long as the equipment is of equivalent type and has the same functions as the supplied equipment.

Conformity

By placing the **CE** mark on this product, we are confirming compliance to all relevant European safety, health and environmental requirements which are applicable in legislation for this product.

Energy Saving

For better energy saving we suggest :

Installing the appliance away from heat sources and not exposed to direct sunlight and in a well ventilated room.

Avoid putting hot food into the refrigerator to avoid increasing the internal temperature and therefore causing continuous functioning of the compressor.

Do not excessively stuff foods so as to ensure proper air circulation.

Defrost the appliance in case there is ice to facilitate the transfer of cold.

In case of absence of electrical energy, it is advisable to keep the refrigerator door closed.

Open or keep the doors of the appliance open as little as possible

Avoid adjusting the setting to temperatures too cold.

Remove dust present on the rear of the appliance



Installing your new appliance

Before using the appliance for the first time, you should be informed of the following tips.

Ventilation of appliance



In order to improve efficiency of the cooling system and save energy, it is necessary to maintain good ventilation around the appliance for the dissipation of heat. For this reason, sufficient clear space should be available around the refrigerator. Suggest :It is advisable for there to be at least 75mm of space from the back to the wall, at least 100mm from its top,at last 100mm from its side to the wall and a clear space in front to allow the doors to open 145°. As shown in following diagrams.

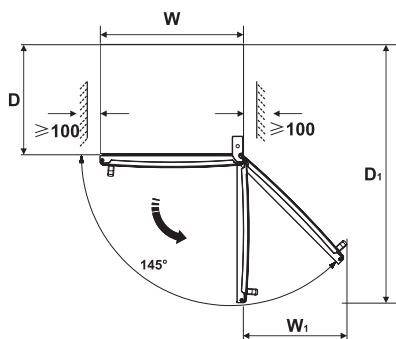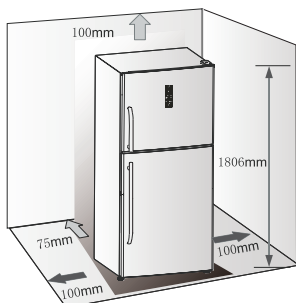

Relevant information

Model	Constant /mm	W	W ₁	D	D ₁
HVDN 8182DSH		860	676	600	1487

Note:

This appliance performs well within the climate class showed in the table below.

It may not work properly if being left at a temperature above or below the indicated range for a long period.

Climate class	Ambient temperature
SN	+10°C to +32°C
N	+16°C to +32°C
ST	+16°C to +38°C
T	+16°C to +43°C


- Stand your appliance in a dry place to avoid high moisture.
- Keep the appliance out of direct sunlight, rain or frost. Stand the appliance away from heat sources such as stoves, fires or heaters.

Leveling of appliance

The appliance should be level in order to eliminate vibration. We recommend that you level the appliance by the following steps.

1. Roll the refrigerator into place.
2. Turn the adjustable feet (with your fingers or a suitable spanner) until it touches the floor.
3. Tilt back the top backwards for about 10-15 mm by turn the feet 1-2 turn further. This will allow the doors to self-close, providing a consistent closed seal.
4. Whenever you want to move the appliance, remember to turn the feet back up so that the appliance can roll freely. Reinstall the appliance when relocating.


Caution! The rollers, which are not castors, should be only used for forward or backward movement. Moving the refrigerator sideways may damage your floor and the rollers.

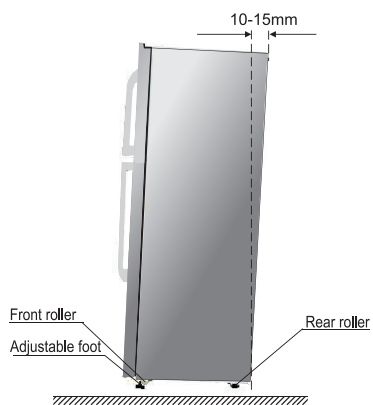

Description of the appliance

- 1.Cabinet
- 2.LED light (inside)
- 3.Screw hole cover
- 4.Wind channel in freezer chamber
- 5.Glass shelf
- 6.Twist Ice tray
- 7.Ice storage box
- 8.LED light (inside)
- 9.Wind channel in refrigerator chamber
- 10.Glass shelf
- 11.Shelves assembly
- 12.Moisture fresh crisper
- 13.Roller
- 14.Adjustable foot
- 15.Upper hinge cover
- 16.Door switch
- 17.Freezer door rack
- 18.Freezer door seal
- 19.Freezer door
- 20.Middle hinge
- 21.Egg tray(inside)
- 22.Small door rack
- 23.Door switch
- 24.Fridge door
- 25.Middle door rack
- 26.Fridge door seal
- 27.Lower door rack

View of the appliance

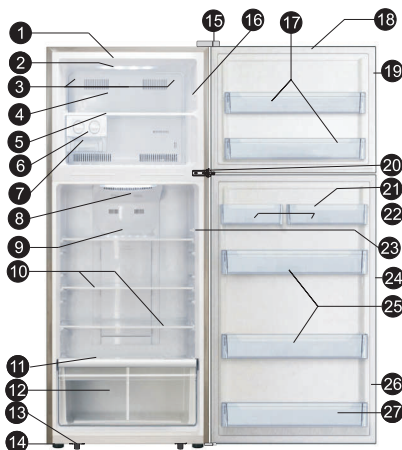

Note:Due to unceasing modification of our products, your refrigerator may be slightly different from this Instruction Manual, but its functions and using methods remain the same.

Note:Shelves and drawers are arranged for optimum energy efficiency on delivery.

Display controls

Use your appliance according to the following control regulations, your appliance has the corresponding functions and modes as the control panels showed in the pictures below. When the appliance is powered on for the first time, the backlighting of the icons on display panel starts working. If no buttons have been pressed and the doors are closed, the backlighting will turn off.



Controlling the temperature

We recommend that when you start your refrigerator for the first time, the temperature for the refrigerator is set to 5°C and the freezer to -18°C. If you want to change the temperature, follow the instructions below.

Caution! When you set a temperature, you set an average temperature for the whole refrigerator cabinet.

Temperatures inside each compartment may vary from the temperature values displayed on the panel, depending on how much food you store and where you place them. Ambient temperature may also affect the actual temperature inside the appliance.

1. Freezer

Press "Freezer" to set freezer temperature between -14°C and -24°C as needed, and the control panel will display corresponding value according to the following sequence.

→ -14°C — -15°C — -16°C — -17°C — -18°C — -19°C —
-24°C — -23°C — -22°C — -21°C — -20°C ←

2. Super Freeze



Super Freeze can quickly lower frozen temperature and freeze your food faster than usual. This can lock the vitamins and nutrition of fresh food and keep your food longer.

- Press "Super Freeze" button to activate the super freeze function. The light will come on and the freezer temperature setting displays -24°C.
- In case of the maximum amount of food to be frozen, we recommend that you let the appliance operates for 6 hours first.
- Super freeze automatically switches off after 26 hours .

● When super freeze function is on you can switch off super freeze function by pressing "Super Freeze" or "Freezer" button and the freezer temperature setting will revert back to its previous setting.

3. Fridge

Press "Fridge" to set fridge temperature between 2°C and 8°C as needed, and control panel will display corresponding values according to the following sequence.

→ 8°C — 7°C — 6°C — 5°C —
2°C — 3°C — 4°C ←

4. Super Cool



Super Cool can refrigerate your food much faster, keeping food fresh for a longer period

- Press "Super Cool" button to activate this function. The light will be illuminated, and the refrigerator temperature setting displays 2°C.
- Super cool automatically switches off after 6 hours.
- When super cool function is on you can switch it off by pressing "Super Cool" or "Fridge" button and the refrigerator temperature setting will revert back to the previous setting.

5. Holiday



If you are going to be away for a long period of time such as a long holiday or business trip, you can activate this function by pressing "Holiday" button for 3 seconds until the light will be illuminated.

●When the holiday function is activated, the temperature of the fridge is automatically switched to 15°C. The fridge temperature setting displays "--" and the freezer compartment remains on.

Important! Do not store any food in the fridge during this time, or they will soon go off.

●When the holiday function is on, you can switch off it by pressing any button of "Holiday", "Fridge" and "Super Cool" button. The fridge temperature will revert back to it's previous setting.

6. Alarm



In case of alarm, "Alarm" icon will be on and there will be buzzing sound. Press "Alarm" key to clear alarm and then "Alarm" icon will turn off and stop buzzing.

Door Alarm

●When door of fridge or freezer is open for over 2 minutes, door alarm will come on. In case of door alarm, buzzer will sound 3 times per minute and stop alarm about 10 minutes later.

●To save energy, please avoid keeping doors open for a long time when using refrigerator. In case of door alarm, it can also clear door alarm by closing the doors.

Temperature alarm

●If freezer temperature is too high due to power failure or other reasons, it will give temperature alarm and the freezer temperature setting displays "--".

●In case of temperature alarm, buzzer will sound constantly for 10 times.

●In case of temperature alarm, press "Alarm" button for 3 seconds to check the highest freezer temperature. The temperature value and "Alarm" icon will simultaneously flash for 5 seconds.

Caution! When refrigerator is powered on again, it is normal to appear temperature alarm and you can press "Alarm" to clear it.



Using your appliance

Your appliance has the accessories as the "Description of the appliance" showed in general, with this part instruction you can have the right way to use them.

Door rack

●It is suitable for the storage of eggs, canned liquid, bottled drinks and packed food, etc. Do not place too many heavy things in the racks


●The middle door shelf can be placed at different heights according to your requirements. Please take food out of the shelf before lifting vertically to reposition.

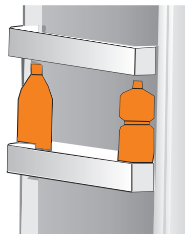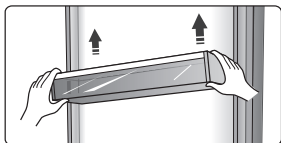

Note: There are egg trays in the upper shelf and bottle holder in the lower shelf.

Shelf in Refrigerator chamber

There are shelves in refrigerator chamber, and they can be taken out to be cleaned.

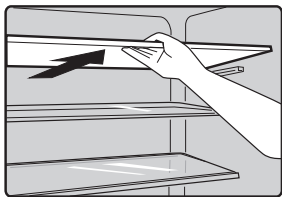


Crisper and Humidity control

The crisper is for storing vegetables and fruits. You can adjust the humidity inside by using the sliding block.

- The sliding block on crisper cover can slide to left or right and the air hole become more or less relatively. More air hole opening means less humidity and less means more humidity.

- We recommend that you store vegetables with more humidity and fruit less humidity.

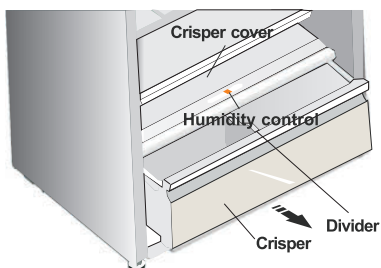

- When you remove the crisper, pull them forward, then lift the crisper off the slides. Remember to empty food in the crisper firstly. Once you have removed the drawers, ensure the slides are pushed back fully.

- Divider easily manage crisper space as you store separate food.

Twistable ice tray

The twistable ice tray is used to make and deposit ice cubes. You should use it as follows.


1. Pull out the twistable ice tray from the installation bracket.
2. Fill the drinking water inside (do not fill above the max water level).
3. Place the filled ice tray back to the bracket.

4. Await for around 3 hours, twist the knobs clockwise and the ice will drop into the ice box below.

Notice :

Ice box is inadvisable to be used to make ice, otherwise it may crack.

If it takes a long time to make ice, do not hold the ice tray directly to avoid the ice tray sticking and hurting your hands.

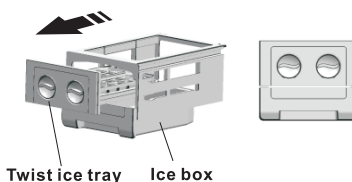

Helpful hints and tips

Energy saving tips

We recommend that you follow the tips below to save energy.

- Try to avoid keeping the door open for long periods in order to conserve energy.
- Ensure the appliance is away from any sources of heat (Direct sunlight, electric oven or cooker etc)
- Don't set the temperature colder than necessary.
- Don't store warm food or evaporating liquid in the appliance.
- Place the appliance in a well ventilated, humidity free, room. Please refer to Installing your new appliance chapter.
- If the diagram shows the correct combination for the drawers, crisper and shelves, do not adjust the combination as this is designed to be the most energy efficient configuration.

Hints for fresh food refrigeration

- Do not place hot food directly into the refrigerator or freezer, the internal temperature will increase resulting in the compressor having to work harder and will consume more energy.
- Do cover or wrap the food, particularly if it has a strong flavor.
- Place food properly so that air can circulate freely around it.

Hints for refrigeration

- Meat (All Types) Wrap in polythene food: wrap and place on the glass shelf above the vegetable drawer. Always follow food storage times and use by dates suggested by manufacturers.
- Cooked food, cold dishes, etc.: They should be covered and may be placed on any shelf.
- Fruit and vegetables: They should be stored in the special drawer provided.
- Butter and cheese: Should be wrapped in airtight foil or plastic film wrap.

film wrap.

- Milk bottles:

Should have a lid and be stored in the door racks.

Hints for freezing

- When first starting-up or after a period out of use, let the appliance run at least 2 hours on the higher settings before putting food in the compartment.
- Prepare food in small portions to enable it to be rapidly and completely frozen and to make it possible to subsequently thaw only the quantity required.
- Wrap up the food in aluminum foil or polyethylene food wraps which are airtight,
- Do not allow fresh, unfrozen food to touch the food which is already frozen to avoid temperature rise of the latter.
- Iced products, if consumed immediately after removal from the freezer compartment, will probably cause frost burns to the skin.
- It is recommended to label and date each frozen package in order to keep track of the storage time.

Hints for the storage of frozen food

- Ensure that frozen food has been stored correctly by the food retailer
- Once defrosted, food will deteriorate rapidly and should not be re-frozen. Do not exceed the storage period indicated by the food manufacturer.

Switching off your appliance

If the appliance needs to be switched off for an extended period, the following steps should be taken prevent mould on the appliance.

1. Remove all food.
2. Remove the power plug from the mains socket.
3. Clean and dry the interior thoroughly.
4. Ensure that all the doors are wedged open slightly to allow air to circulate.

Cleaning and care

For hygienic reasons the appliance (including exterior and interior accessories) should be cleaned regularly at least every two months.

Caution! The appliance must not be connected to the mains during cleaning. Danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains socket.

Exterior cleaning

To maintain good appearance of your appliance, you should clean it regularly.

- Wipe the digital panel and display panel with a clean, soft cloth.

- Spray water onto the cleaning cloth instead of spraying directly on the surface of the appliance. This helps ensure an even distribution of moisture to the surface.

- Clean the doors, handles and cabinet surfaces with a mild detergent and then wiped dry with a soft cloth.

Caution!

- Don't use sharp objects as they are likely to scratch the surface.

- Don't use Thinner, Car detergent, Clorox, ethereal oil, abrasive cleansers or organic solvent such as Benzene for cleaning. They may damage the surface of the appliance and may cause fire.

Interior cleaning

You should clean the appliance interior regularly. It will be easier to clean when food stocks are low. Wipe the inside of the fridge freezer with a weak solution of bicarbonate of soda, and then rinse with warm water using a wrung-out sponge or cloth. Wipe completely dry before replacing the shelves and baskets.

Thoroughly dry all surfaces and removable parts.

Although this appliance automatically defrosts, a layer of frost may occur on the freezer compartment's interior walls if the freezer door is opened frequently or kept open too long. If the frost is too thick, choose a time when the supply of food stocks are low and proceed as follows:

1. Remove existing food and accessories baskets, unplug the appliance from the mains power and leave the doors open. Ventilate the room thoroughly to accelerate the thawing process.

2. When defrosting is completed, clean your freezer as described above.

Caution! Don't use sharp objects to remove frost from the freezer compartment. Only after the interior is completely dry should the appliance be switched back on and plugged back into the mains socket.

Door seals cleaning

Take care to keep door seals clean. Sticky food and drinks can cause seals to stick to the cabinet and tear when you open the door. Wash seal with a mild detergent and warm water. Rinse and dry it thoroughly after cleaning.

Caution! Only after the door seals are completely dry should the appliance be powered on.

Replacing the LED light:

Warning: The LED light must not be replaced by the user! If the LED light is damaged, contact the customer helpline for assistance. To replace the LED light, the below steps can be followed:

1. Unplug your appliance.
2. Remove light cover by pushing up and out.
3. Hold the LED cover with one hand and pull it with the other hand while pressing the connector latch.
4. Replace LED light and snap it correctly in place.

Troubleshooting

If you experience a problem with your appliance or are concerned that the appliance is not functioning correctly, you can carry out some easy checks before calling for service, please see below. You can carry out some easy checks according to this section before calling for service.

Warning! Don't try to repair the appliance yourself. If the problem persists after you have made the checks mentioned below, contact a qualified electrician, authorized service engineer or the shop where you purchased the product.

Problem	Possible cause & Solution
Appliance is not working correctly	Check whether the power cord is plugged into the power outlet properly.
	Check the fuse or circuit of your power supply, replace if necessary.
	The ambient temperature is too low. Try setting the chamber temperature to a colder level to solve this problem.
	It is normal that the freezer is not operating during the automatic defrost cycle, or for a short time after the appliance is switched on to protect the compressor.
Odours from the compartments	The interior may need to be cleaned
	Some food, containers or wrapping cause odours.
Noise from the appliance	The sounds below are quite normal: ●Compressor running noises. ●Air movement noise from the small fan motor in the freezer compartment or other compartments. ●Gurgling sound similar to water boiling. ●Popping noise during automatic defrosting. ●Clicking noise before the compressor starts.
	Other unusual noises are due to the reasons below and may need you to check and take action: The cabinet is not level. The back of appliance touches the wall. Bottles or containers fallen or rolling.
The motor runs continuously	It is normal to frequently hear the sound of the motor, it will need to run more when in following circumstances: ● Temperature setting is set colder than necessary ● Large quantity of warm food has recently been stored within the appliance. ●The temperature outside the appliance is too high. ●Doors are kept open too long or too often. ●After your installing the appliance or it has been switched off for a long time.
A layer of frost occurs in the compartment	Check that the air outlets are not blocked by food and ensure food is placed within the appliance to allow sufficient ventilation. Ensure that door is fully closed. To remove the frost, please refer to cleaning and care chapter.

Temperature inside is too warm	You may have left the doors open too long or too frequently; or the doors are kept open by some obstacle; or the appliance is located with insufficient clearance at the sides, back and top
Temperature inside is too cold	Increase the temperature by following the "Display controls" chapter.
Doors cant be closed easily	Check whether the top of the refrigerator is tilted back by 10-15mm to allow the doors to self close, or if something inside is preventing the doors from closing.
Water drips on the floor	The water pan (located at the rear bottom of the cabinet) may not be properly leveled, or the draining spout (located underneath the top of the compressor depot) may not be properly positioned to direct water into this pan, or the water spout is blocked. You may need to pull the refrigerator away from the wall to check the pan and spout.
The light is not working	●The LED light may be damaged. Refer to replace LED lights in cleaning and care chapter. ●The control system has disabled the lights due to the door being kept open too long, close and reopens the door to reactivate the lights.

Disposal of the appliance

It is prohibited to dispose of this appliance as household waste.

Packaging materials

Packaging materials with the recycle symbol are recyclable. Dispose of the packaging into a suitable waste collection container to recycle it.

Before disposal of the appliance

1. Pull out the mains plug from the mains socket.
2. Cut off the power cord and discard with the mains plug

Warning! Refrigerators contain refrigerant and gases in the insulation. Refrigerant and gases must be disposed of professionally as they may cause eye injuries or ignition. Ensure that tubing of the refrigerant circuit is not damage prior to proper disposal.

	Correct Disposal of this product
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

İçindekiler

GÜVENLİK BİLGİLERİ	20
ESKİ CİHAZIN HURDAYA AYRILMASI	23
Enerji Tasarrufu	23
Yeni cihazın kurulumu	24
Cihazın tanımı	26
Ekran kontrolleri	27
Cihazın kullanımı	28
Kullanışlı ipuçları	30
Temizlik ve bakım	31
Sorun giderme	32
Cihazın hurdaya ayrılması	33

Bu ürünü satın aldığınız için teşekkür ederiz.

Buzdolabınızı kullanmadan önce, performansını artırmak için lütfen bu kullanım kılavuzunu dikkatlice okuyun. Tüm belgeleri daha sonra kullanmak üzere veya ürünün diğer sahipleri için saklayın. Bu ürün sadece evde veya aşağıdaki gibi benzer yerlerde kullanıma yöneliktir:

- mağaza, ofis ve diğer çalışma ortamlarında personel mutfak alanında
- çiftliklerde ve müşterilere yönelik olarak oteller, motellerde ve konut tipi diğer ortamlarda
- pansiyonlarda
- ikram hizmetlerinde ve perakende satışa dönük olmayan benzer uygulamalarda.

Bu cihaz sadece yiyeceklerin saklanması için kullanılmalıdır, bunun dışında başka her türlü kullanım tehlikeli olarak kabul edilir ve üretici söz konusu ihmallerden dolayı herhangi bir şekilde sorumluluk kabul etmez. Ayrıca garanti koşullarını da dikkate almanız önerilir.

GÜVENLİK BİLGİLERİ

Buzdolabında soğutucu gaz (R600a : İzobütan) ve yalıtım gazı (siklopentan) kullanılmaktadır; bu gazlar çevreye zarar vermemekle birlikte yüksek oranda yanıcıdır.

Sizin için tehlike oluşturabilecek durumlardan kaçınmak adına aşağıdaki yönetmelikleri takip etmenizi öneririz:

Herhangi bir işlem yapmadan önce fişi prizden çıkartın.

- Şarap dolaplarının arkasında ve içindeki soğutma sistemi soğutucu akışkan içerir. Bu yüzden, borulara zarar vermekten kaçının.**
- Soğutma sisteminde bir kaçak tespit edilirse, duvar prizine dokunmayın ve ortamda ocak, kibrit, çakmak v.b.ateş kaynağı kullanmayın. Pencereyi açın ve odayı havalandırın. Ardından onarım yapmaları için servis merkezini arayın.**
- Oluşan buzu ve buz kalıbını gidermek için bıçakla veya sert bir cisimle kazımayın. Bu durumda, soğutucu devresi hasar görebilir ve bu devreden saçılan maddeler yangına veya gözlerinizin zarar görmesine yol açabilir.**
- Cihazı nemli, yağlı veya tozlu yerlere kurmayın.**

- Cihazı ısıtıcıların veya yanıcı maddelerin yakınına kurmayın.
- Uzatma kablosu veya adaptör kullanmayın.
- Elektrik kablosunu gereğinden fazla çekmeyin ya da katlamayın veya fişe ıslak elle dokunmayın.
- Fiş ve/veya elektrik kablosuna hasar vermeyin; Bu elektrik çarpmasına veya yangına neden olabilir.
- Fişi temiz tutmanız önerilir, fiş üzerindeki fazla toz yangına sebebiyet verebilir.
- Buz giderme işlemini hızlandırmak için mekanik cihazlar veya başka ekipmanlar kullanmayın.
- Alevli yanan araçlar veya ısıtıcı, buharlı temizleyici, mum, gaz lambası ve benzeri araçları buz giderme sürecini hızlandırmak için kesinlikle kullanmayın.
- Şarap Dolaplarının yakınında sprey boya gibi yanıcı spreyler kullanmayın veya saklamayın. Bu durum patlama veya yangına neden olabilir.
- Elektrikli cihazları, üretici tarafından önerilen tip cihaz olmadıkları sürece gıda saklama bölmelerinin içinde kullanmayın.
- Eter, benzin, LPG propan gazı, aerosol sprey kutuları, yapıştırıcılar, saf alkol, vb. yanıcı ve yüksek uçucu nitelikteki malzemeleri yerleştirmeyin veya saklamayın. Bu malzemeler patlamaya neden olabilir.
- Şarap dolaplarında ilaç veya araştırma malzemeleri saklamayın. Saklama sıcaklıklarının sıkı şekilde kontrol edilmesi gereken malzemelerin saklanması durumunda, söz konusu malzemenin bozulması veya risklere neden olacak kontrol dışı bir reaksiyon oluşması mümkündür.

- Cihaz muhafazasındaki veya dahili yapıdaki havalandırma açıklıklarının kapanmasına izin vermeyin.
- Cihazın üstüne herhangi bir cisim ve / veya su dolu kaplar koymayın.
- Şarap dolapları üzerinde onarım yapmayın. Tüm müdahaleler nitelikli personel tarafından yapılmalıdır.
- Yeterli gözetim ve cihazın güvenli bir şekilde kullanımıyla ilgili gerekli talimatların sağlanması ve olası tehlikelerin anlaşılmış olması kaydıyla bu cihaz, 8 yaşından büyük çocuklar ve fiziksel, duyuşsal veya zihinsel yetenekleri azalmış veya bilgisiz ya da deneyimsiz olan kişiler tarafından kullanılabilir.
- Çocuklar, cihazla oynamamalıdır. Temizlik ve kullanıcı bakımı, gözetim altında olmayan çocuklar tarafından yapılmamalıdır

ESKİ CİHAZIN HURDAYA AYRILMASI



Bu cihaz, Atık Elektrikli ve Elektronik Cihazların (AEEE) Kontrolü hakkındaki 2012/19/EU Avrupa Birliği Yönergesine uygun biçimde işaretlenmiştir.

AEEE, hem kirlenici maddeleri (bunlar çevre üzerinde olumsuz etkilere neden olabilir) hem de temel bileşenleri (bunlar yeniden kullanılabilir) içerir. Tüm kirlenicilerin düzgün bir şekilde bertaraf edilmesi ve atılması ve tüm malzemelerin geri kazanılıp ve dönüştürülmesi için AEEE'nin özel işlemlere tabi tutulması önemlidir.

Kişiler, AEEE'nin bir çevre sorununa dönüşmemesini sağlamakta önemli bir rol üstlenir; bazı temel kurallara uymak şarttır:

- AEEE'lere ev atıkları olarak işlem görmemelidir;
- AEEE'ler, belediye veya kayıtlı şirketler tarafından yönetilen ilgili toplama noktalarına teslim edilmelidir. Çoğu ülkede, büyük AEEE'ler için evden toplama hizmeti verilir.

Yine bir çok sayıda ülkede, yeni bir cihaz aldığınızda, eskisine karşılık yenisi uygulaması temelinde, perakendeci alınacak ekipmanın teslim edilen ekipman ile aynı türden ve aynı fonksiyonlara sahip olması şartıyla eski cihazı ücretsiz olarak teslim almaktadır.

Uygunluk

Bu ürüne **CE** işaretinizi ekleyerek, ürünün bu ürünle ilgili mevzuat için geçerli tüm Avrupa güvenlik, sağlık ve çevre gereksinimlerine uygunluğunu onaylamış oluruz.

Enerji Tasarrufu

Daha iyi enerji tasarrufu için şunları öneririz:

Cihazı ısı kaynaklarından uzağa kurun, doğrudan güneş ışığına maruz bırakmayın ve iyi havalandırılmış bir odada kullanın.

İç sıcaklığı artırarak kompresörün sürekli çalışmasına neden olmamak için buzdolabına sıcak yiyecekler koymaktan kaçının.

Uygun hava sirkülasyonunu sağlamak için haddinden fazla gıda koymayın.

Soğuk hava aktarımını kolaylaştırmak için buzlanma varsa cihazda buz çözme işlemi uygulayın.

Elektriğin kesik olduğu durumlarda, buzdolabı kapısının kapalı tutulması önerilir.

Cihazın kapılarını mümkün olduğunca az açın veya açık tutun.

Sıcaklık derecesini çok soğuk olacak şekilde ayarlamayın.

Cihazın arka kısmındaki tozu alın



Yeni cihazın kurulumu

Cihazı ilk kez kullanmadan önce aşağıdaki ipuçlarına göz atmanızda fayda var.

Cihaz havalandırması



Soğutma sisteminin verimliliğini artırmak ve enerji tasarrufunda bulunmak amacıyla ısı dağılımını sağlamak için cihaz çevresinde iyi bir havalandırmanın olması gerekir. Bu nedenle buzdolabı çevresinde yeteri kadar açık alan bulunmalıdır. Öneri: Arka duvarla en az 75 mm, üstten 100 mm, yan duvardan ve kapıların 145 ° açılabilmesi için önden en az 100 mm açık alan olması önerilir. Aşağıdaki şemalarda gösterildiği gibi.

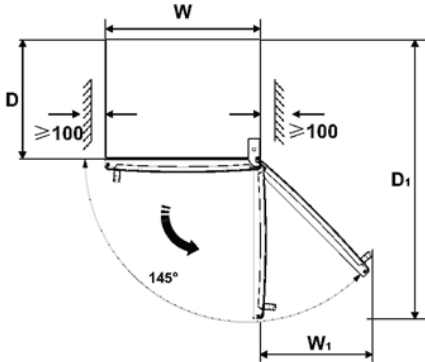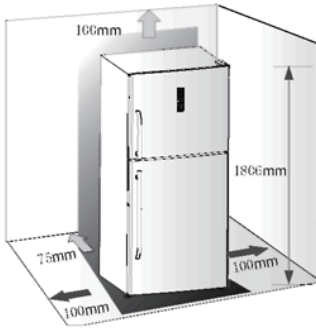

İlgili bilgiler

Sabit /mm	W	W ₁	D	D ₁
Model				
HVND 8182DSH	860	676	600	1487

Not:

Bu cihaz aşağıdaki tabloda gösterilen iklim sınıfında başarılı şekilde çalışır.

Belirtilen aralığın üzerinde veya altında bir sıcaklıkta uzun süre bırakılması halinde düzgün çalışmayabilir.

İklim sınıfı	Ortam sıcaklığı
SN	+10°C ila +32 °C
N	+16°C ila +32 °C
ST	+16°C ila +38 °C
T	+16°C ila +43 °C

• Yüksek nemden etkilenmemek adına cihazı kuru bir yere kurun.


• Cihazı direkt güneş ışığı, yağmur veya donmadan koruyun. Cihazı ocak, şömine veya ısıtıcı gibi ısı kaynaklarından uzak tutun.

Cihazın dengelenmesi

Titreşimi önlemek amacıyla cihaz dengede olmalıdır. Cihazı aşağıdaki yöntemlere uyarak dengelemenizi tavsiye ederiz.

1. Buzdolabını yerine götürün.
2. Ayarlanabilir ayakları (parmaklarınız veya uygun bir anahtarla) zemine değene kadar döndürün.
3. Üst kısımdan 10-15mm geriye doğru iterek ayakları 1-2 tur daha döndürün. Bu sayede kapılar kendiliğinden kapanır ve sürekli kapalı kalması sağlanır.
4. Cihazı taşımamız gerektiğinde cihazın rahat şekilde taşınabilmesi için bu ayakları döndürerek kaldırmayı unutmayın. Yeri değiştirildiğinde cihazı yeniden kurun.

Dikkat! Tekerlekler sadece ileri geri hareket için kullanılmalıdır. Buzdolabı yana doğru hareket ettirildiğinde zemin ve tekerlekler hasar görebilir.

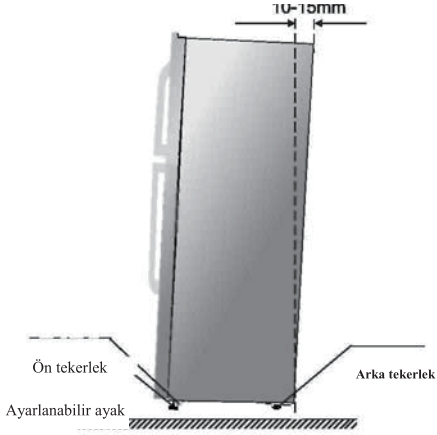

Cihazın tanımı

- 1.Kabin
- 2.LED ışık (iç kısım)
- 3.Vida deliği kapağı
- 4.Dondurucu bölmesi hava kanalı
5. Cam raf
6. Buz tepsisi
- 7.Buz saklama kutusu
- 8.LED ışık (iç kısım)
9. Buzdolabı bölmesi hava kanalı
- 10.Cam raf
- 11.Raf düzenneği
- 12.Nem korumalı sebzelik
- 13.Tekerlek
- 14.Ayarlanabilir ayak
- 15.Üst menteşe kapağı
- 16.Kapı anahtarı
17. Dondurucu kapı rafı
18. Dondurucu kapı contası
19. Dondurucu kapısı
20. Orta menteşe
21. Yumurta tepsisi (iç kısım)
22. Küçük kapı rafı
- 23.Kapı anahtarı
24. Buzdolabı kapısı
- 25.Orta kapı rafı
26. Buzdolabı kapı contası
- 27.Alt kapı rafı

Cihazın görünümü



Not: Ürünlerimizde sürekli iyileştirmeler yaptığımız için, buzdolabınız bu Kullanım Kılavuzuna göre farklı olabilir ancak fonksiyonları ve kullanım yöntemleri aynı olacaktır.

Not: Raflar ve çekmeceler teslimatta optimum enerji verimliliği sunacak şekilde ayarlanmıştır.

Ekran kontrolleri

Cihazınızı aşağıdaki kontrol yönetmeliklerine göre kullanın. Cihazınız aşağıdaki resimlerde gösterilen kontrol panelleri ile ilgili fonksiyonlar ve modlara sahiptir. Cihazınıza ilk kez elektrik verildiğinde ekran panelindeki simgelerin arka ışıklandırması çalışmaya başlar. Bir düğmeye basılmaz ve kapılar kapatılırsa, arka ışıklandırma sönecektir.



Sıcaklık kontrolü

Buzdolabını ilk kez çalıştırdığınızda sıcaklığın soğutma için 5 °C ve dondurucu için -18 °C olarak ayarlanması önerilir. Sıcaklığı değiştirmek isterseniz aşağıdaki talimatları izleyin.

Dikkat! Sıcaklığı ayarladığınızda buzdolabı kabininin tamamında geçerli ortalama bir sıcaklık ayarı yapılır.

Her bir bölmedeki sıcaklıklar yerleştirdiğiniz yiyecek miktarı ve yerleşim konumuna bağlı olarak panelde gösterilen sıcaklık değerlerinden farklı olabilir. Ortam sıcaklığı da cihaz içindeki asıl sıcaklığı etkileyebilir.

1. Dondurucu

Dondurucu sıcaklığını isteğinize göre -14 °C ve -24 °C arasında ayarlamak için "Freezer" (Dondurucu) düğmesine bastığınızda, kontrol panelinde aşağıdaki sıraya göre ilgili değer gösterilir.

-14°C — -15°C — -16°C — -17°C — -18°C — -19°C
-24°C — -23°C — -22°C — -21°C — -20°C

2. Super Freeze (Hızlı Dondurma)



Super Freeze (Hızlı Dondurma) dondurma sıcaklığını hızlı şekilde düşürerek yiyecekleri normalden daha hızlı dondurur. Bu sayede taze yiyeceklerin vitaminleri ve besin değerleri korunur ve yiyecek daha uzun süre korunur.

- Super Freeze (Hızlı Dondurma) fonksiyonunu etkinleştirmek için "Super Freeze (Hızlı Dondurma)" düğmesine basın. Işık yanar ve dondurucu sıcaklık ayarı -24 °C olarak gösterilir.
- Dondurulması gereken yiyecek miktarı maksimum düzeyde olduğunda cihazın 6 saat kadar çalıştırılması önerilir.
- Super Freeze (Hızlı Dondurma) 26 saat sonra otomatik olarak kapanır.

• Super Freeze (Hızlı Dondurma) fonksiyonu açık olduğunda Super Freeze (Hızlı Dondurma) veya Freezer (Dondurucu) düğmesine basarak kapatabilirsiniz. Dondurucu sıcaklık ayarı önceki ayarına geri dönecektir.

3. Fridge (Buzdolabı)

Buzdolabı sıcaklığını isteğinize göre 2 °C ve 8 °C arasında ayarlamak için "Fridge" (Buzdolabı) düğmesine bastığınızda, kontrol panelinde aşağıdaki sıraya göre ilgili değer gösterilir.

8°C — 7°C — 6°C — 5°C
2°C — 3°C — 4°C

4. Super Cool (Hızlı Soğutma)



Super Cool (Hızlı Soğutma) yiyecekleri daha hızlı soğutarak daha uzun süre taze kalmalarını sağlar

- Bu fonksiyonu etkinleştirmek için Super Cool (Hızlı Soğutma) düğmesine basın. Işık yanar ve buzdolabı sıcaklık ayarı 2°C olarak görüntülenir.
- Super Cool (Hızlı Soğutma) 6 saat sonra otomatik olarak kapanır.
- Super Cool (Hızlı Soğutma) fonksiyonu açık olduğunda Super Cool (Hızlı Soğutma) veya Fridge (Buzdolabı) düğmesine basarak kapatabilirsiniz. Buzdolabı sıcaklık ayarı önceki ayarına geri dönecektir.

5. Holiday (Tatil)



Uzun tatil veya iş gezisi gibi nedenlerle uzun süre evde olmayacağınız durumlarda Holiday (Tatil) düğmesine ışık yanana kadar 3 saniye basarak bu fonksiyonu etkinleştirebilirsiniz.

•Tatil fonksiyonu devrede olduğunda buzdolabı sıcaklığı otomatik olarak 15 °C şeklinde ayarlanır. Buzdolabı sıcaklık ayarı "-" olarak görüntülenir ve dondurucu bölmesi açık durumda olur.

Önemli! Bu süre içinde buzdolabında yiyecek saklamayınız. Kısa sürede bozulabilirler.

•Tatil fonksiyonu açık olduğunda, "Holiday", "Fridge" ve "Super Cool" düğmelerinden birine basarak kapatabilirsiniz. Buzdolabı sıcaklığı önceki ayarına geri dönecektir.

6.Alarm



Alarm durumunda "Alarm" simgesi görünür ve uyarı sesi duyulur. Alarmı yok saymak için "Alarm" düğmesine bastığınızda "Alarm" simgesi kaybolur ve uyarı sesi durur.

Kapı Alarmı

•Buzdolabı veya dondurucu kapısı 2 dakikadan uzun süre açık olduğunda kapı alarmı devreye girer. Kapı alarmı devreye girdiğinde uyarı sesi dakikada 3 kez çalar ve 10 dakika kadar sonra durur.

• Enerji tasarrufu sağlamak için buzdolabını kullanırken kapıları çok uzun süre açık bırakmamaya dikkat edin. Kapı alarmı devreye girdiğinde kapılar kapatırsanız alarm devreden çıkar.

Sıcaklık alarmı

• Dondurucu sıcaklığı elektrik kesintisi veya diğer nedenlerle çok yüksek olduğunda sıcaklık alarmı devreye girer ve dondurucu sıcaklık ayarı "-" şeklinde gösterilir.

• Sıcaklık alarmı durumunda yaklaşık 10 kez uyarı sesi duyulur.

• Sıcaklık alarmı durumunda en yüksek dondurucu sıcaklığını kontrol etmek için "Alarm" düğmesine 3 saniye basın. Sıcaklık değeri ve "Alarm" simgesi aynı anda 5 saniye yanıp söner.


Dikkat! Buzdolabına tekrar elektrik verildiğinde, sıcaklık alarmının devreye girmesi normaldir. Devreden çıkarmak için "Alarm" düğmesine basın.

Cihazın kullanımı

Cihazınızda "Cihazın tanımı" kısmında gösterilen aksesuarlar bulunuyorsa, talimatın bu kısmında bu aksesuarları nasıl kullanacağınızı öğrenebilirsiniz.

Kapı rafı

• Yumurta, kutu içecek, şişe içecek ve paketli yiyecek, vs. saklanması için uygundur. Raflara çok ağır nesneler yerleştirmeyin. Orta kapı rafı ihtiyacınıza göre farklı yüksekliklere yerleştirilebilir. Raf yerini değiştirmek üzere dikey olarak kaldırmadan önce içindeki yiyecekleri çıkarın.

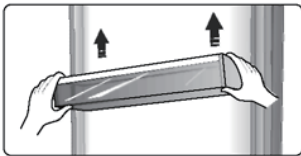

Not: Üst rafta yumurta tepsisi ve alt rafta şişe tutacakları bulunur.

Buzdolabı bölmesi rafları

Buzdolabı bölümünde raflar bulunur ve bu raflar çıkarılarak temizlenebilir.



Sebzelik ve Nem kontrolü

Sebzelik bölmesi sebze ve meyve saklamak için kullanılır. Sürgü kısmını kullanarak iç kısımdaki nemi ayarlayabilirsiniz.

- Sebzelikte bulunan sürgü sağa veya sola hareket ettirilerek daha çok veya daha az hava girişi sağlanabilir. Daha fazla hava girişi daha az nem ve daha az hava ise daha çok nem anlamına gelir.
- Sebzeleri yüksek nemde, meyveleri ise düşük nemde saklamanız önerilir.



- Sebzeliği çıkarmak için öne doğru çekin ve sürgülerden kaldırarak çıkarın. Bu işlem öncesinde sebzelikteki yiyecekleri boşaltmayı unutmayın. Çekmeceleri çıkardıktan sonra sürgülerin tekrar geri itildiğinden emin olun.
- Ayırıcı ile farklı yiyecekleri saklamak için sebzelikteki alanı yönetebilirsiniz.

Buz tepsisi

Buz tepsisi buz küpü yapmak ve saklamak için kullanılır. Aşağıdaki gibi kullanılmalıdır.


1. Buz tepsisini kurulum braketinden çekerek çıkarın.
2. İçine içilebilir su doldurun (maks. su seviyesine kadar doldurun).
3. Doldurulan buz tepsisini braketten geri yerleştirin.

4. 3 saat kadar bekleyin, düğmeleri saat yönünde döndürdüğünüzde alt kısımdaki buz kutusuna buzlar düşer.

Dikkat:

Buz kutusunu buz yapmak için kullanmayın. Aksi halde çatlayabilir.

Buz yapma işlemi çok uzun sürdüyse, buz tepsisini doğrudan elinizle tutmayın. Elinize yapışabilir ve yaralanmanıza neden olabilir.

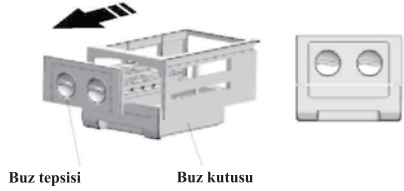

Kullanışlı tavsiye ve ipuçları

Enerji Tasarrufu ipuçları

Enerji tasarrufu için aşağıdaki ipuçlarını izlemeniz tavsiye edilir.

- Enerji tasarrufu için dolap kapılarını uzun süre açık tutmayın.
- Cihazın ısı kaynaklarından uzak olduğundan emin olun (Doğrudan güneş ışığı, elektrikli fırın veya ocak, vs.)
- Sıcaklığı gerektiğinden daha soğuk ayarlamayınız.
- Cihaz içine sıcak yiyecek veya buharı çıkan sıvılar yerleştirmeyin.
- Cihazı iyi havalandırılan, düşük nemli bir odaya yerleştirin. Yeni cihazın kurulumu bölümüne bakınız.
- Şemada çekmece, sebzelik ve rafların doğru kombinasyonu gösteriliyorsa, bu kombinasyon en enerji verimli kombinasyon olduğu için değiştirmeniz önerilir.

Taze gıda soğutması için ipuçları

Sıcak gıdaları doğrudan buzdolabı veya dondurucuya yerleştirmeyin. İçerideki sıcaklık artar ve kompresör daha yoğun çalışarak daha fazla enerji tüketimine yol açar.

- Yiyeceklerin güçlü kokuları varsa sarmanız veya üstünü örtmeniz önerilir.
- Yiyecekleri etrafında hava sirkülasyonu olacak şekilde yerleştirin.

Soğutma ipuçları

• Et (tüm türleri) Polietilen yiyecek filmi ile sarın ve sebzeliğin üzerindeki cam rafa yerleştirin. Her zaman üreticinin belirtmiş olduğu gıda saklama süreleri ve son kullanma tarihlerine uyun.

- Pişirilmiş gıda, soğuk yemek, vs.: Üzeri örtülerek herhangi bir rafa yerleştirilebilir.

• Meyve ve sebze:

Ayrılmış özel çekmecede saklanmalıdır.

• Tereyağı ve peynir:

Hava geçirmez folyo veya plastik film ile sarılmalıdır.

streç film.

- Süt şişeleri:

Şişeler kapakları kapalı olarak kapı raflarında saklanmalıdır.

Dondurma ipuçları

• İlk çalıştırmada veya bir süre kullanmadığınızda içine gıda yerleştirmeden cihazı 2 saat yüksek ayarlarda çalıştırın.

• Hızlı ve tamamen donması ve gerektiğinde sadece gerektiği kadar kullanabilmeniz açısından yiyecekleri küçük miktarlara bölün.

• Yiyecekleri alüminyum folyo veya hava geçirmez polietilen streç filme sarın,

• Donmuş bulunan yiyeceklerin sıcaklığını yükselmemesi için yeni yerleştirdiğiniz, donmamış yiyeceklerin bunlarla temas etmesini önleyin.

• Donmuş ürünler dondurucudan çıkarılır çıkarılmaz tüketilirse ciltte buz yanıklarına neden olabilir.

• Saklama süresini takip edebilmeniz için dondurulan paketlerin üzerine tarihi belirten bir etiket yapıştırmanız önerilir.

Dondurulmuş gıda saklama ipuçları

• Dondurulmuş gıdaların üreticinin talimatlarına göre doğru saklandığından emin olun

• Buzu çözüldüğünde yiyecekler hızla bozulur. Tekrar dondurulmamalıdır. Üreticinin belirttiği saklama süresini aşmayın.

Cihazın kapatılması

Cihazın uzun süre kapatılması gerekiyorsa cihaz içinde küf oluşumunu önlemek adına aşağıdaki adımlar izlenmelidir.

1. Tüm yiyecekleri boşaltın.
2. Elektrik fişini prizden çekin.
3. İç kısmı tamamen temizleyin ve kurulayın.
4. Hava sirkülasyonunu sağlamak için kapıların hafif açık kalmasını sağlayın.

Temizlik ve bakım

Hijyen açısından cihaz (dış kısım ve iç aksesuarlar dahil olmak üzere) iki ayda bir düzenli olarak temizlenmelidir. **Dikkat!** Cihaz temizlik sırasında elektriğe bağlanmamalıdır. Elektrik çarpması tehlikesi! Cihazı temizlemeden önce cihazı kapatın ve fişi prizden çıkarın.

Dış temizlik

Cihazın iyi görünümünü korumak için düzenli olarak temizleyin.

-Dijital panel ve ekran panelini temiz ve yumuşak bezle silin.

-Suyu doğrudan cihaz üzerine sıkmak yerine temizlik bezine sıkarak temizleyin. Bu sayede nem yüzeyde eşit şekilde dağılır.

-Kapıları, kolları ve kabin yüzeylerini hafif bir deterjanla temizleyin ve daha sonra yumuşak bezle silerek kurulaayın.

Dikkat!

-Yüzeyde çizik oluşturacağı için sert nesneler kullanmayın.

-Temizlik için tiner, otomobil şampuanı, Clorox, eter, benzen gibi organik solvent veya aşındırıcı temizleyiciler kullanmayın. Bunlar cihaz yüzeyine zarar verebilir ve yangına neden olabilir.

İç temizlik

Cihazın iç kısmını düzenli olarak temizleyin. İç kısımda daha az yiyecek olduğunda temizlik daha kolay olacaktır. Buzdolabı ve dondurucu içini hafif karbonat solüsyonu ile silin daha sonra sıkılmış sünger veya bez kullanarak ılık su ile durulaayın. Rafları ve sepetleri yerleştirmeden önce tamamen kurulaayın.

Tüm yüzeyleri ve çıkarılabilir parçaları tamamen kurutun.

Bu cihaz otomatik olarak buz çözme yapsa da, dondurucu kapağı sık sık açılıyorsa veya uzun süre açık bırakılıyorsa dondurucu bölmesinin iç duvarlarında buz tabakaları oluşabilir. Buz çok kalınsa, düşük miktarda yiyecek olan bir zamanda aşağıdaki işlemleri yapın:

1. İçeride bulunan yiyecekleri ve aksesuar sepetlerini çıkarın, cihazın fişini çekin ve kapıları açık bırakın. Çözülme sürecini hızlandırmak için odayı havalandırın.

2. Buz çözme tamamlandığında, dondurucunuzu yukarıda açıklandığı gibi temizleyin.

Dikkat! Dondurucu bölmesindeki buzı temizlemek için keskin nesneler kullanmayın. İç kısım tamamen kuruduğunda cihazın fişi tekrar takılmalı ve tekrar açılmalıdır.

Kapı contası temizliği

Kapı contalarının temiz tutulması gerekir. Yapışkan yiyecek ve içecekler contaların kabine yapışmasına ve kapıyı açtığımızda yırtulmasına neden olabilir. Contaları hafif deterjan ve ılık su ile yıkayın. Temizlik sonrasında tamamen durulaayın ve kurulaayın.

Dikkat! Contalar tamamen kuruduğunda cihaz tekrar çalıştırılmalıdır.

LED ışığı değiştirilmesi:

Uyarı: LED ışık kullanıcı tarafından değiştirilmemelidir! LED ışık hasar gördüğünde, yardım için müşteri yardım hattına başvurun. LED ışığı değiştirmek için aşağıdaki adımlar takip edilebilir:

1. Cihazı fişten çekin.
2. Işık kapağını iterek çıkarın.
3. LED kapağını bir elinizle tutun ve konektör mandalını diğer elinizle bastırarak çekin.
4. LED ışığı değiştirin ve doğru şekilde yerine yerleştirin.

Sorun giderme

Cihazınızla ilgili sorun yaşadığınızda veya cihazın doğru çalışmadığından şüphelendiğinizde servisi aramadan önce aşağıda gösterilen bazı basit kontrolleri yapabilirsiniz. Servisi aramadan önce bu bölümdeki bazı basit kontrolleri yapabilirsiniz.

Uyarı! Cihazı kendiniz tamir etmeye çalışmayın. Aşağıda bahsedilen kontroller sonrasında sorun devam ederse uzman bir elektrikçi, yetkili servis mühendisleri veya ürünü aldığınız mağaza ile iletişime geçin.

Sorun	Olası nedeni ve çözümü
Cihaz düzgün çalışmıyor	Güç kablosunun elektrik prizine düzgün takılı olup olmadığını kontrol edin.
	Güç kaynağınızın sigortalarını veya devresini kontrol edin ve gerekirse değiştirin.
	Ortam sıcaklığı çok düşük. Bu sorunu çözmek için bölme sıcaklığını daha soğuk bir seviyeye ayarlamayı deneyin.
	Kompresörün korunması amacıyla otomatik buz çözme sırasında veya cihaz açıldıktan sonra kısa bir süre dondurucunun çalışmaması normaldir.
Bölmelerden kötü kokular geliyor	İç kısmın temizlenmesi gerekiyor
	Bazı yiyecekler, kaplar veya ambalajlar kötü kokulara neden olabilir.
Cihazdan gürültü geliyor	Aşağıdaki sesler normaldir: •Kompresör çalışması sesi. •Dondurucu bölmesi veya diğer bölmelerdeki küçük fan motorundan gelen hava sesi. •Su kaynamasına benzeyen sesler. •Otomatik buz çözme sırasında gelen çıtlama sesi. •Kompresör çalışmadan önce gelen tık sesi.
	Diğer alışılmadık sesler aşağıdaki nedenlerden kaynaklanıyor olabilir ve kontrol etmeniz ve önlem almanız gerekebilir: Kabin dengeli değil. Cihazın arkası duvara dokunuyor. Düşen veya yuvarlanan şişe veya kaplar.
Motor sürekli olarak çalışıyor	Motorun sesinin sık sık duyulması normaldir, aşağıdaki durumlarda daha çok çalışabilir: •Sıcaklık gerekenden soğuk ayarlanmış •Cihaz içine yakın zamanda yüksek miktarda sıcak yiyecek yerleştirilmiş. •Cihaz dışındaki sıcaklık çok yüksek. •Kapılar uzun süre veya sık sık açık bırakılmış. •Cihazın kurulumundan sonra uzun süre çalıştırılmamışsa.
Bölme içinde buz tabakası oluşuyor	Hava kanallarının yiyeceklerle tıkanmadığını kontrol edin ve yiyeceklerin cihaz içine yeterli havalandırmaya olanak sağlayacak şekilde yerleştirilmesini sağlayın. Kapının tamamen kapatıldığını emin olun. Buzu temizlemek için lütfen temizlik ve bakım bölümüne bakın.

İç kısımdaki sıcaklık çok yüksek	Kapıları uzun süre veya sık sık açık bırakmış olabilirsiniz veya kapılar bir nesne nedeniyle açık kalmış olabilir ya da cihaz yanlar, üst ve arkada yeterli mesafe olmadan yerleştirilmiştir
İç kısımdaki sıcaklık çok düşük	"Ekran kontrolleri" bölümüne göre sıcaklığı artırın.
Kapılar kolayca kapanmıyor	Kapıların kendiliğinden kapanması için buzdolabının üstten 10-15 mm arkaya doğru eğimli olduğunu veya iç kısımdaki bir şeyin kapıların kapanmasını önleyip önlemediğini kontrol edin.
Zeminde su damlaları var	Su haznesi (kabinin arka alt kısmında bulunan) düzgün şekilde dengelenmemiş olabilir veya tahliye musluğu (kompresör deposunun üst kısmının altında bulunan) suyun bu hazneye yönlendirilmesi için doğru şekilde konumlandırılmamış olabilir ya da su musluğu tıkalı olabilir. Hazneyi ve musluğu kontrol etmek için buzdolabını duvardan öne doğru çekmeniz gerekir.
Işık düzgün çalışmıyor	•LED ışık zarar görmüş olabilir. LED ışıkları temizlik ve bakım bölümünde anlatıldığı gibi değiştirin. •Kontrol sistemi kapılar uzun süre açık kaldığı için ışıkları kapatmış olabilir. Tekrar devreye sokmak için kapıyı kapatın ve tekrar açın.

Cihazın hurdaya ayrılması

Bu cihazın diğer evsel atıklar ile birlikte atılması yasaktır.

Ambalaj malzemeleri

Geri dönüşüm sembolü ambalaj malzemeleri geri dönüşümlüdür. Geri dönüşüm için ambalajı uygun atık toplama konteynirlarına atın.

Cihazın hurdaya ayrılmasından önce

1. Elektrik fişini prizden çekin.
2. Güç kablosunu kesin ve fiş ile birlikte atın

Uyarı! Buzdolabında soğutucu akışkan ve gazlar bulunur. Soğutucu akışkan ve gazlar göz yaralanmasına veya yangına neden olabileceği için profesyonel kişiler tarafından bertaraf edilmelidir. Hurdaya ayırmadan önce soğutucu akışkan borularının hasar görmediğinden emin olun.

Ürünün doğru şekilde hurdaya ayrılması	
	Bu işaret bu ürünün AB ülkelerinde diğer evsel atıklar ile birlikte bertaraf edilmemesi gerektiğini belirtir. Kontrolsüz atık imhası nedeniyle çevreye veya insan sağlığına zarar gelmesini önlemek amacıyla malzeme kaynaklarının sürdürülebilir kullanımını desteklemek için bilinçli şekilde geri dönüşüm sağlayın. Kullanılmış cihazı iade etmek için iade ve toplama sistemlerini kullanın veya ürünü satın aldığımız bayi ile iletişime geçin. Çevre dostu geri dönüşüm için ürünü sizden alabilirler.

Candy Hoover Group Srl
Via Camolli, 16
20861, Brugherio (Monza e Brianza)
Tel: 039 20861

İTHALATÇI FİRMA:
CANDY HOOVER EUROASIA
EV GEREÇLERİ SAN. TİC. A.Ş.
İçerenköy Mahallesi Hal Yolu Cd.
Çayır yolu Sk. No: 11 Sayar İş Merkezi
Kat:7 ATAŞEHİR / İSTANBUL
Tel: +90 216 466 42 42
Fax: +90 216 466 15 45
www.hoover.com.tr
servis@hoover.com.tr